



**RNAV STANDARD DEPARTURE CHART - INSTRUMENT  
(SID) - ICAO**

**KARLOVY VARY  
RNAV SID RWY 11**

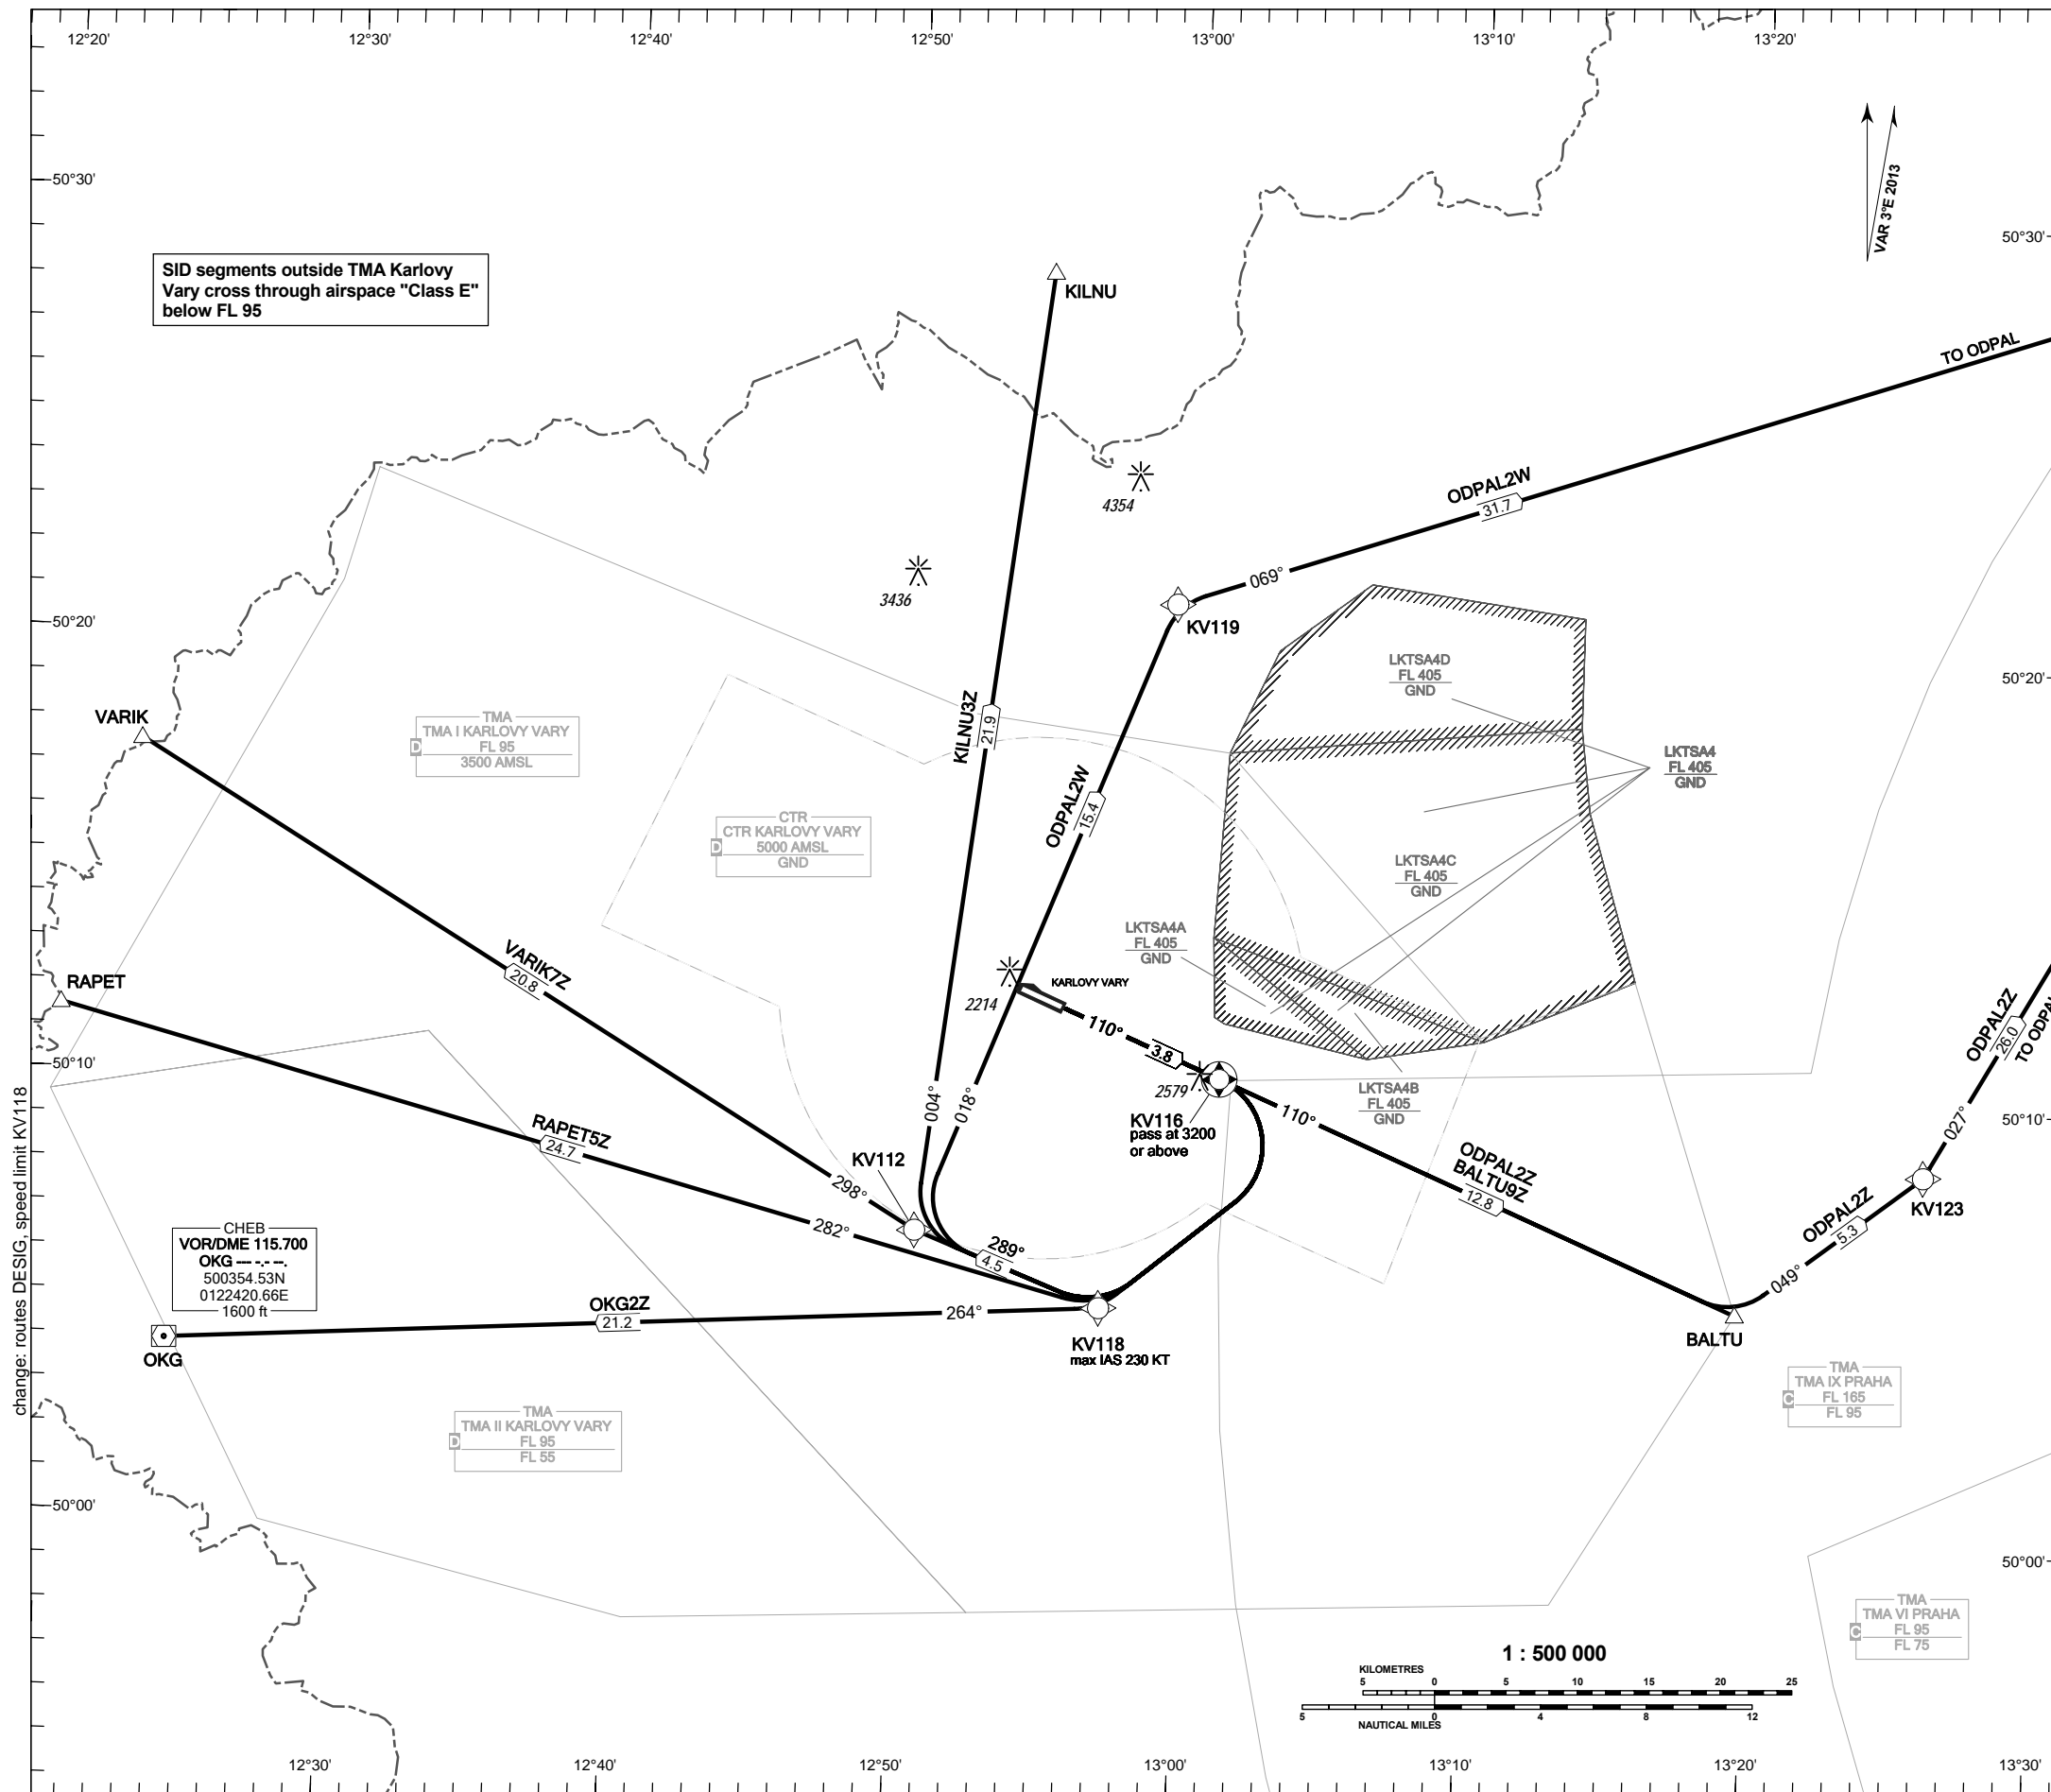

KARLOVY VARY APPROACH / RADAR	118.650
KARLOVY VARY TOWER	119.955
SUPPLEMENTARY FREQ TWR	121.230
KARLOVY VARY ATIS	122.905
EMERGENCY FREQ	118.955
	121.500

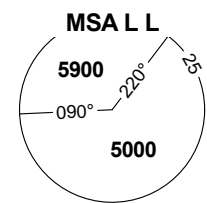

TRANSITION ALTITUDE  
5000

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS ARE IN FEET  
DISTANCES ARE IN NM