


**RNAV STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAO**

**PRAHA/RUZYŇĚ
RNAV SID RWY 12**

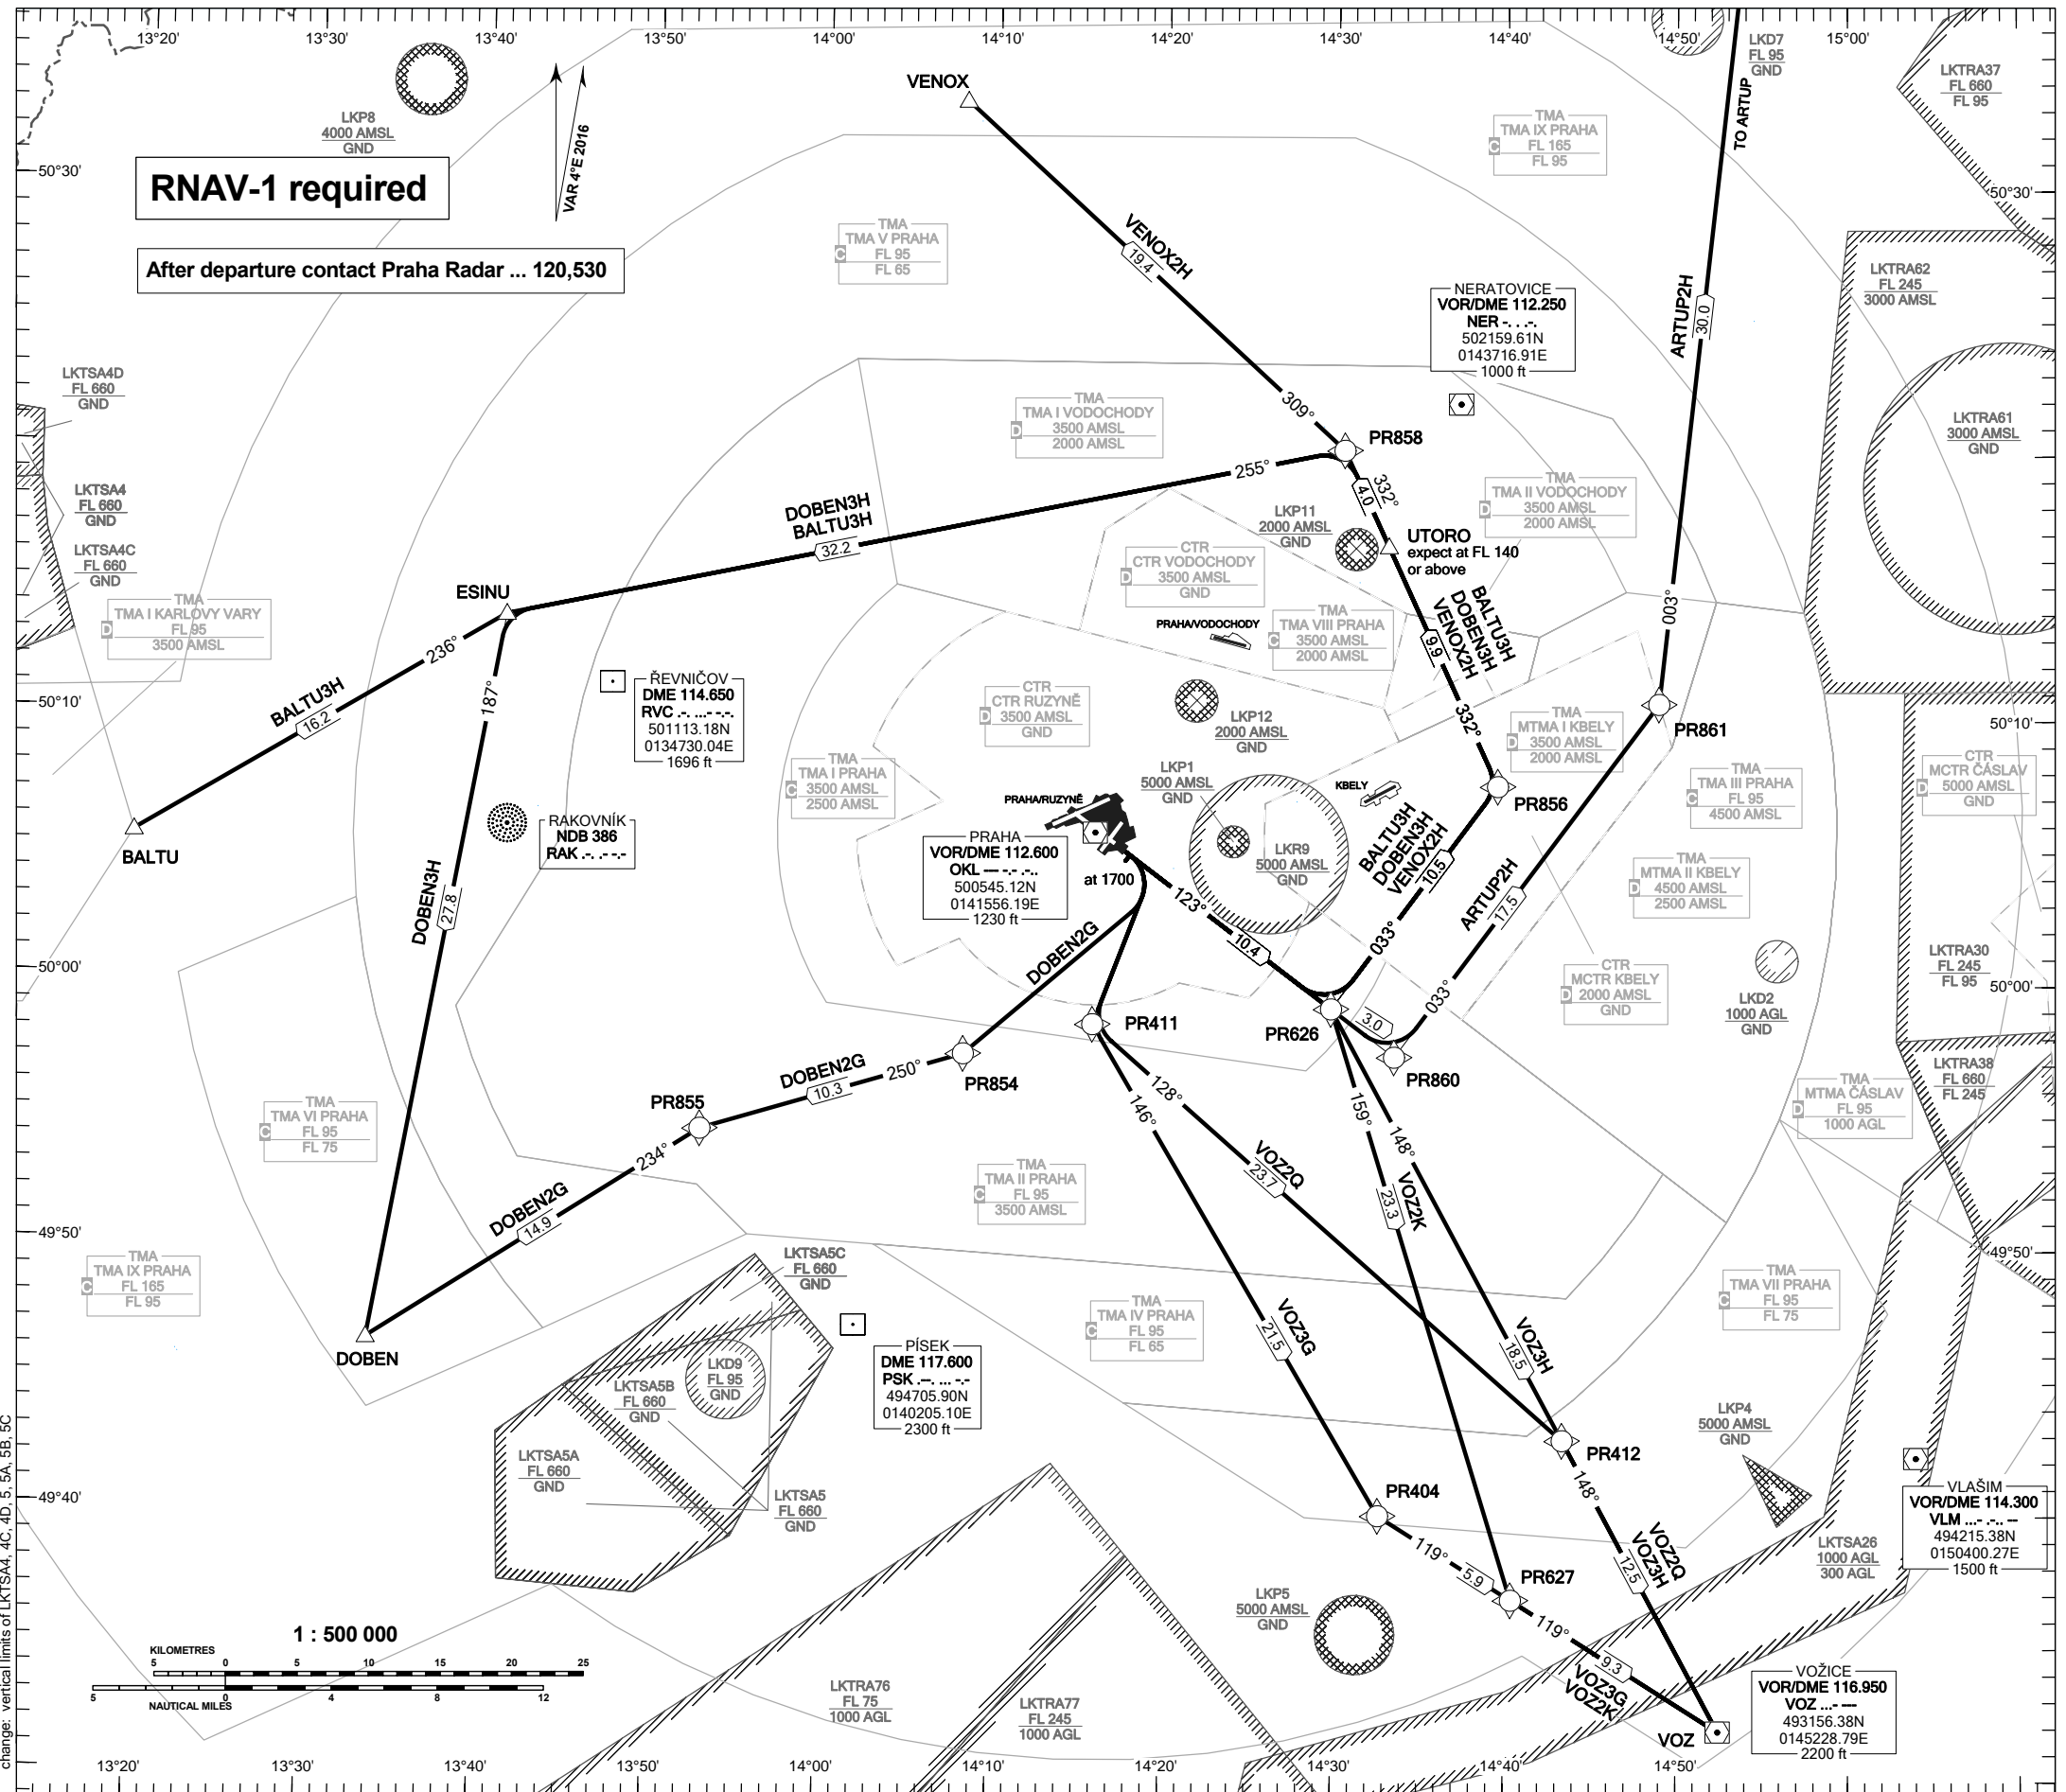


RNAV-1 required
After departure contact Praha Radar ... 120,530

VOZ 2Q
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 24 is in use.

VOZ 2K
Only for propeller driven aircraft between 0500 - 2100 (0400 - 2000) UTC when RWY 06 is in use.

PRAHA RADAR	120.530
RUZYŇĚ RADAR	127.580
SUPPLEMENTARY FREQ APP	118.310
RUZYŇĚ DELIVERY	119.010
SUPPLEMENTARY FREQ TWR	120.060
RUZYŇĚ TOWER	118.110
SUPPLEMENTARY FREQ TWR	134.560
RUZYŇĚ GROUND	121.910
RUZYŇĚ ATIS	122.160
EMERGENCY FREQ	121.500

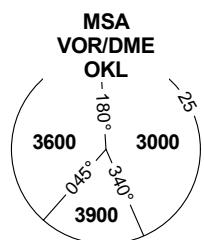

**TRANSITION ALTITUDE
5000**

**DEPARTURE SPEED LIMIT
BELOW FL 100**

JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

see AD 2-LKPR 2.22.3.3.6

BEARINGS, TRACKS AND
RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS
ARE IN FEET
DISTANCES ARE IN NM

change: vertical limits of LKTS44, 4C, 4D, 5, 5A, 5B, 5C