



**RNAV STANDARD DEPARTURE CHART - INSTRUMENT
(SID) - ICAO**

**PRAHA/RUZYŇĚ
RNAV SID RWY 06**

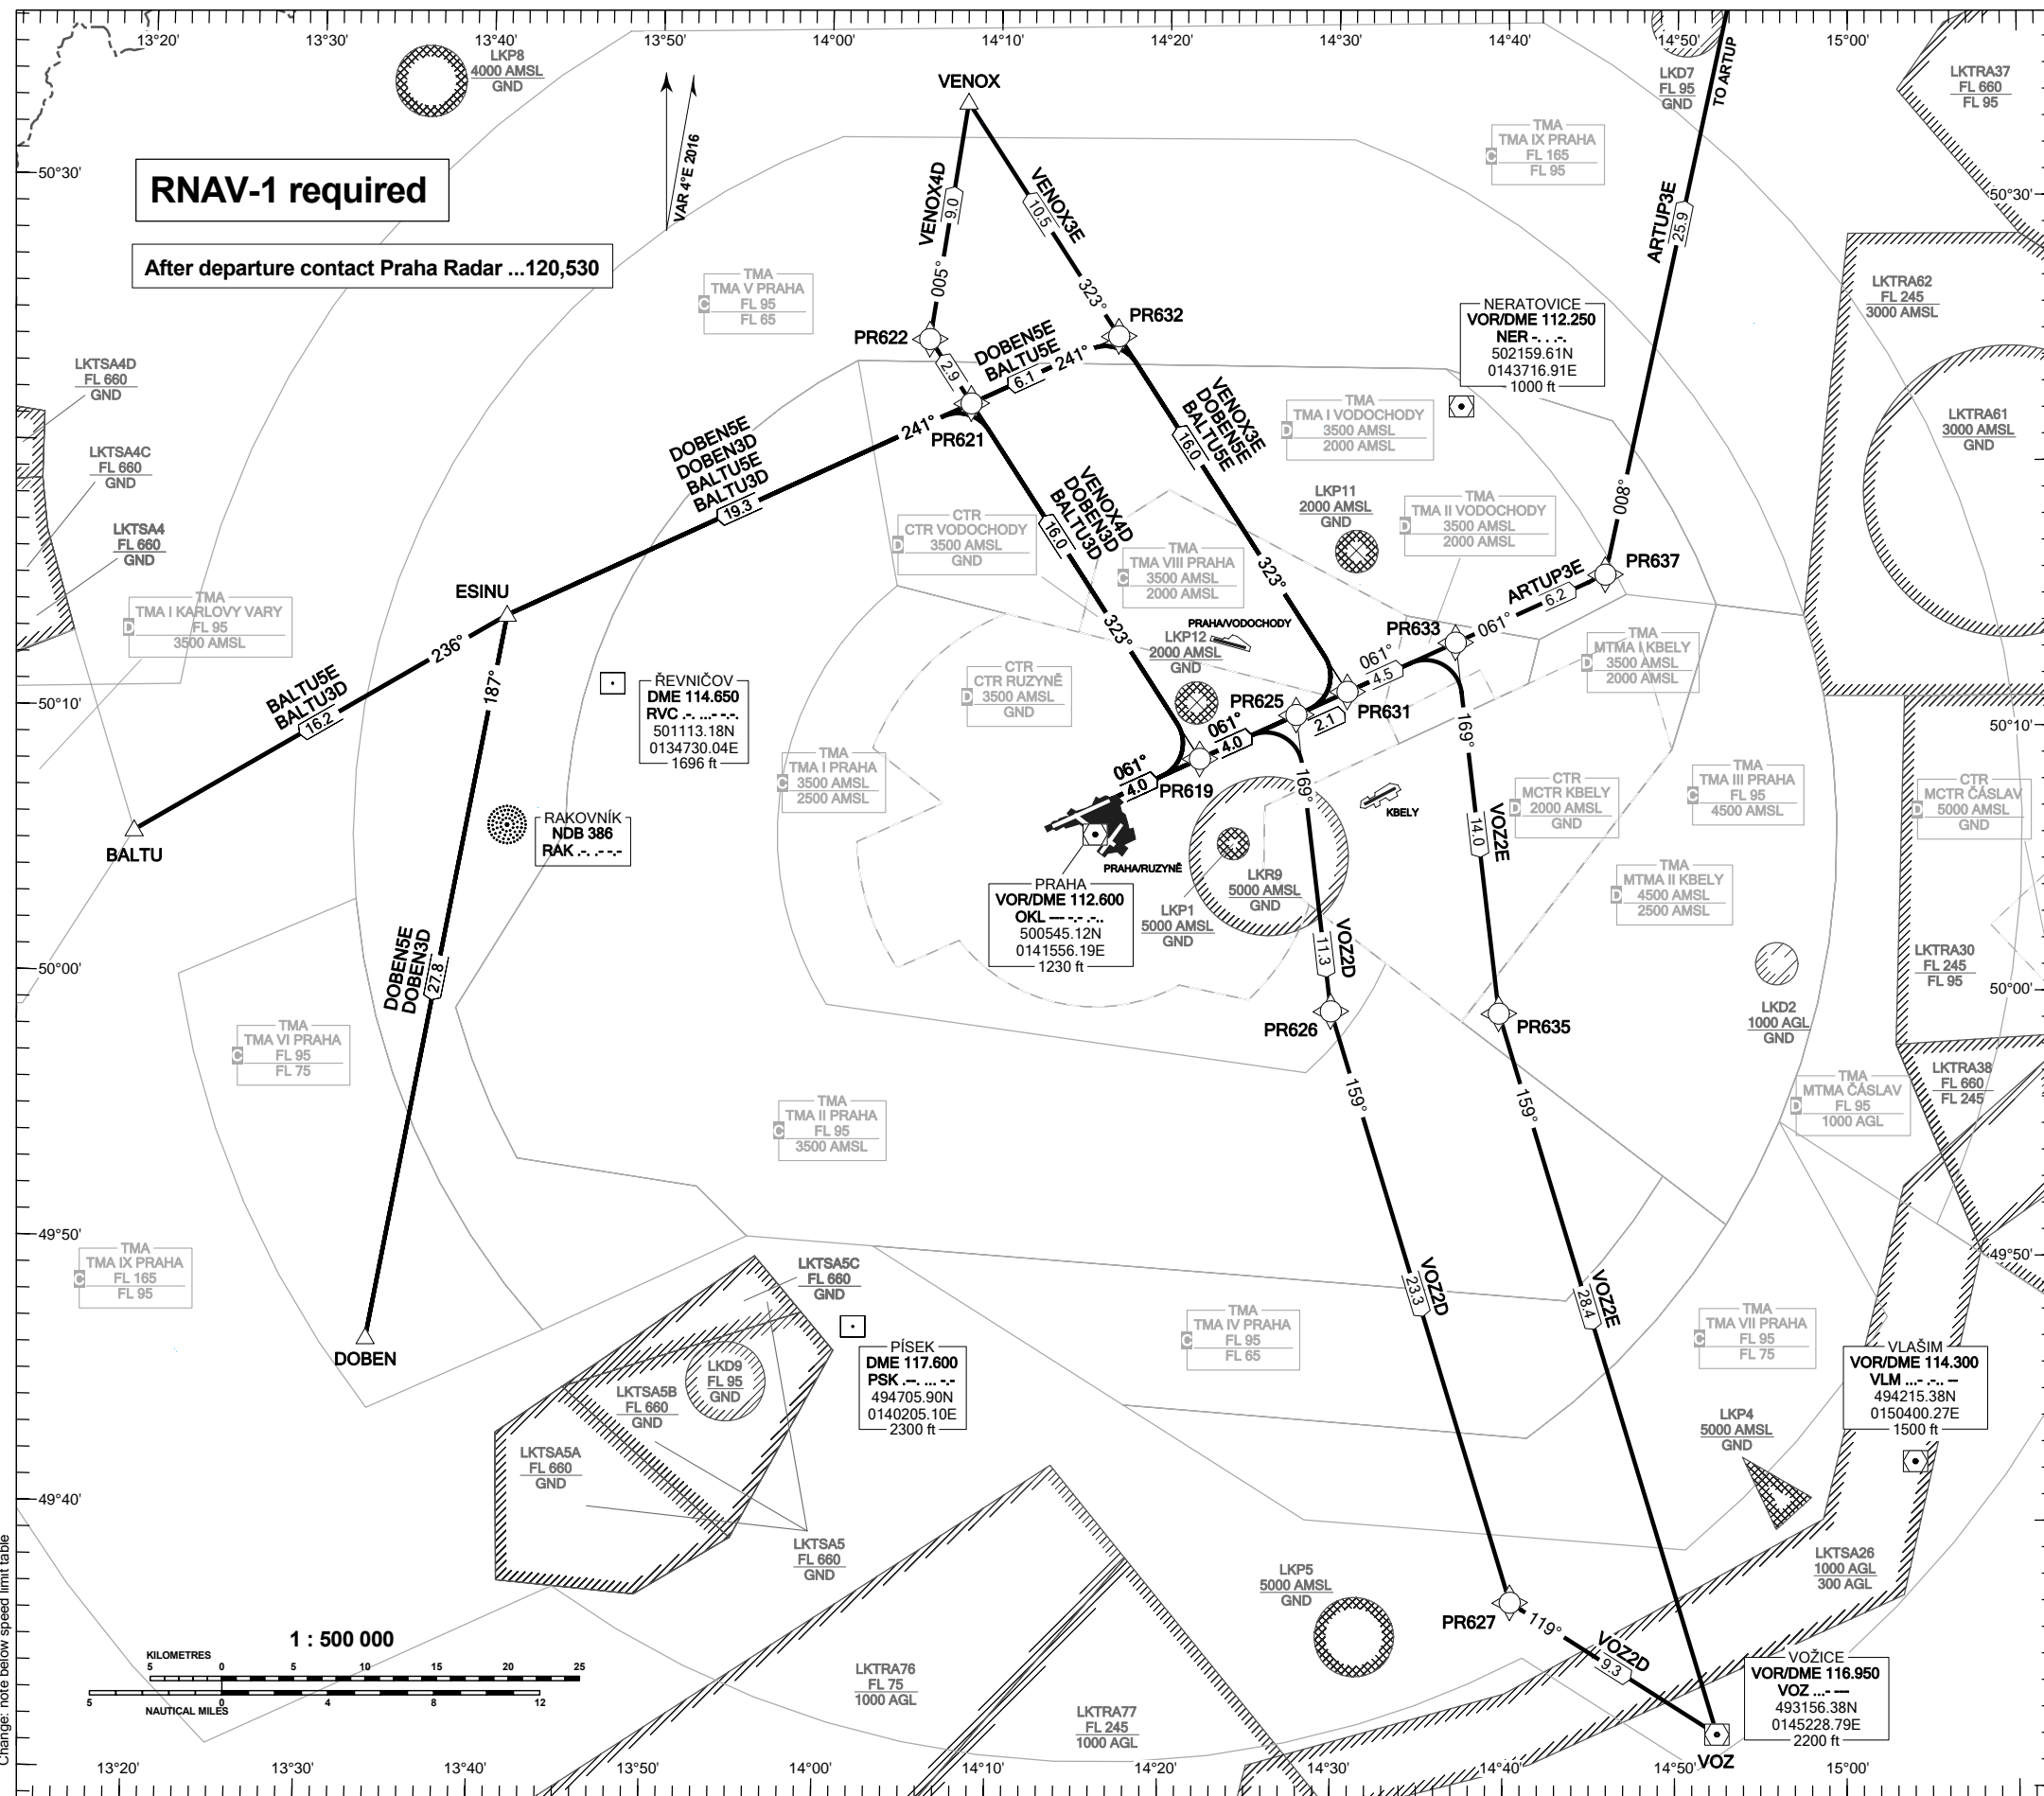

RNAV-1 required
After departure contact Praha Radar ...120,530

PRAHA RADAR	120.530
RUZYŇĚ RADAR	118.310
SUPPLEMENTARY FREQ APP	119.010
RUZYŇĚ DELIVERY	136.080
RUZYŇĚ TOWER	120.060
SUPPLEMENTARY FREQ TWR	118.110
RUZYŇĚ GROUND	134.560
RUZYŇĚ ATIS	121.910
EMERGENCY FREQ	122.160
	121.500

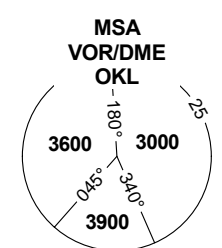

TRANSITION ALTITUDE
5000

DEPARTURE SPEED LIMIT BELOW FL 100	
JETS	MAX IAS 250 KT
PROPS	MAX IAS 180 KT

BEARINGS, TRACKS AND
RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS
ARE IN FEET
DISTANCES ARE IN NM

see AIP AD 2-LKPR-33, 2.22.4.3.5