



**RNAV STANDARD DEPARTURE CHART - INSTRUMENT
(SID) - ICAO**

**KARLOVY VARY
RNAV SID RWY 11**

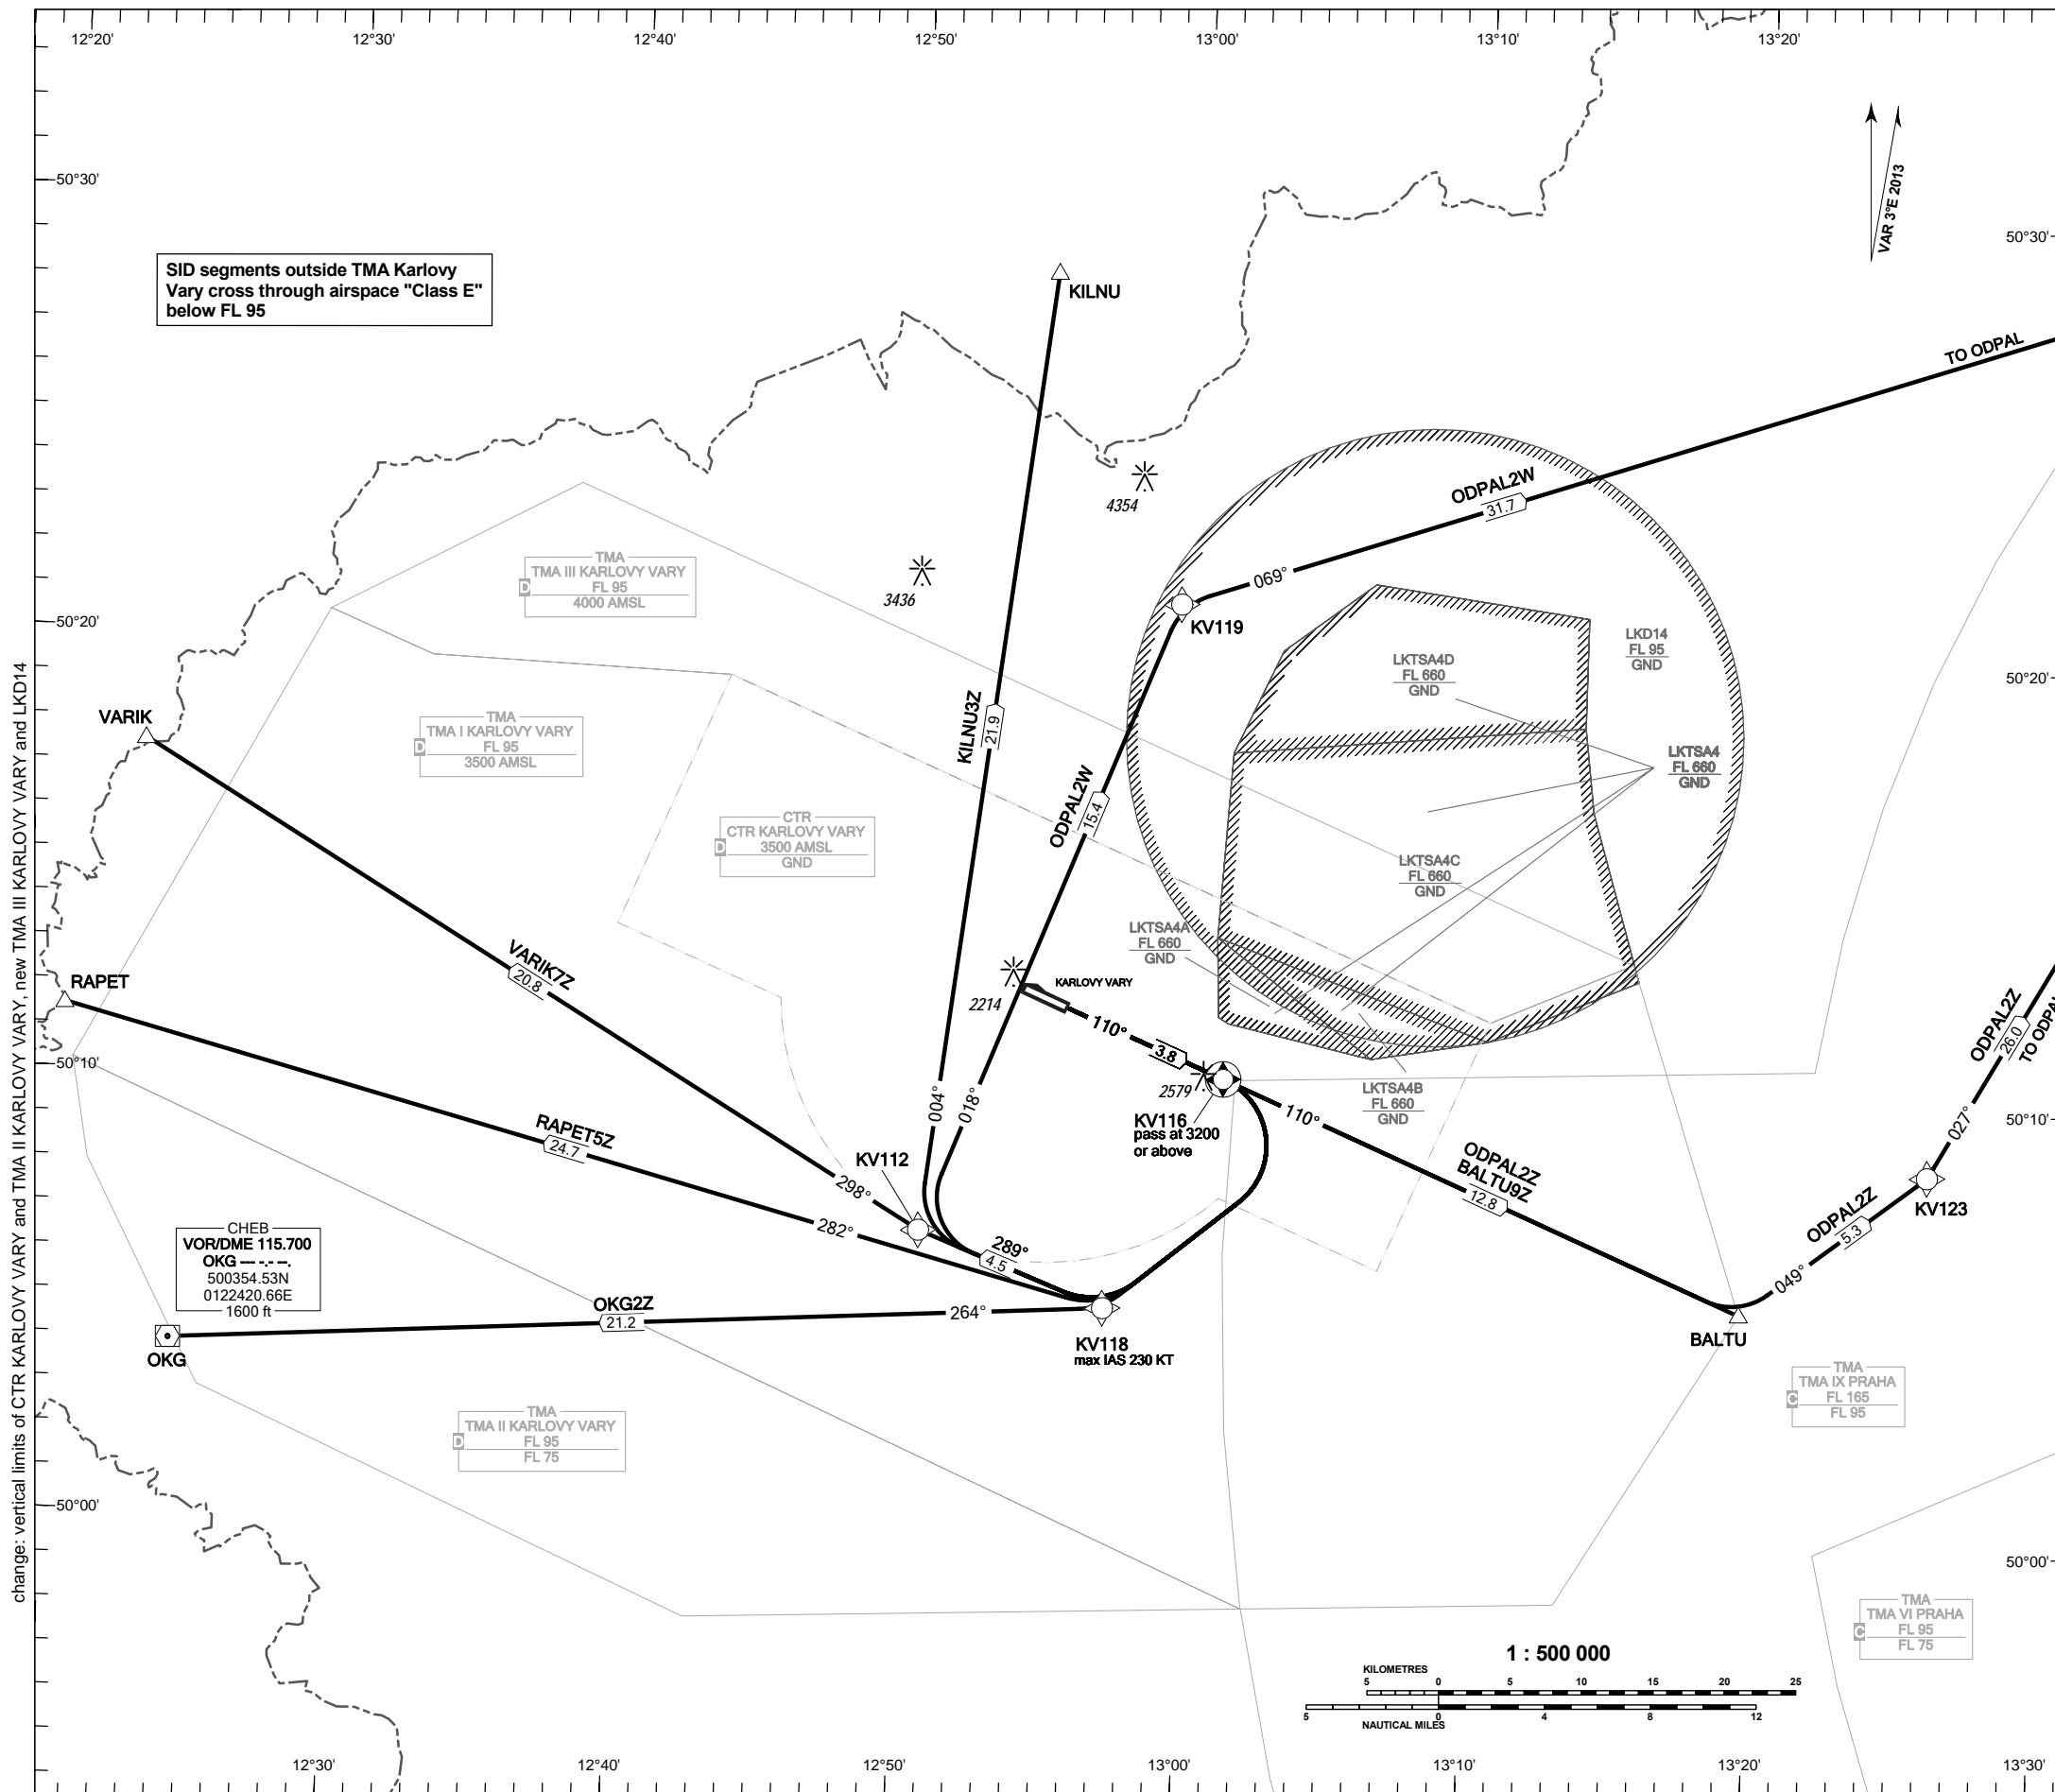

SID segments outside TMA Karlovy Vary cross through airspace "Class E" below FL 95

KARLOVY VARY APPROACH / RADAR	118.650
KARLOVY VARY TOWER	119.955
KARLOVY VARY ATIS	121.230
EMERGENCY FREQ	118.955
	121.500

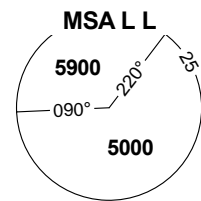

TRANSITION ALTITUDE
5000

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC
ALTITUDES AND ELEVATIONS ARE IN FEET
DISTANCES ARE IN NM